




HP Pavilion 14-b120dx CPU Cooling Fan Replacement

How to remove and replace the CPU Cooling Fan, specifically for the laptop model HP-Pavilion 14-b120dx.

Written By: Erin Lavalla

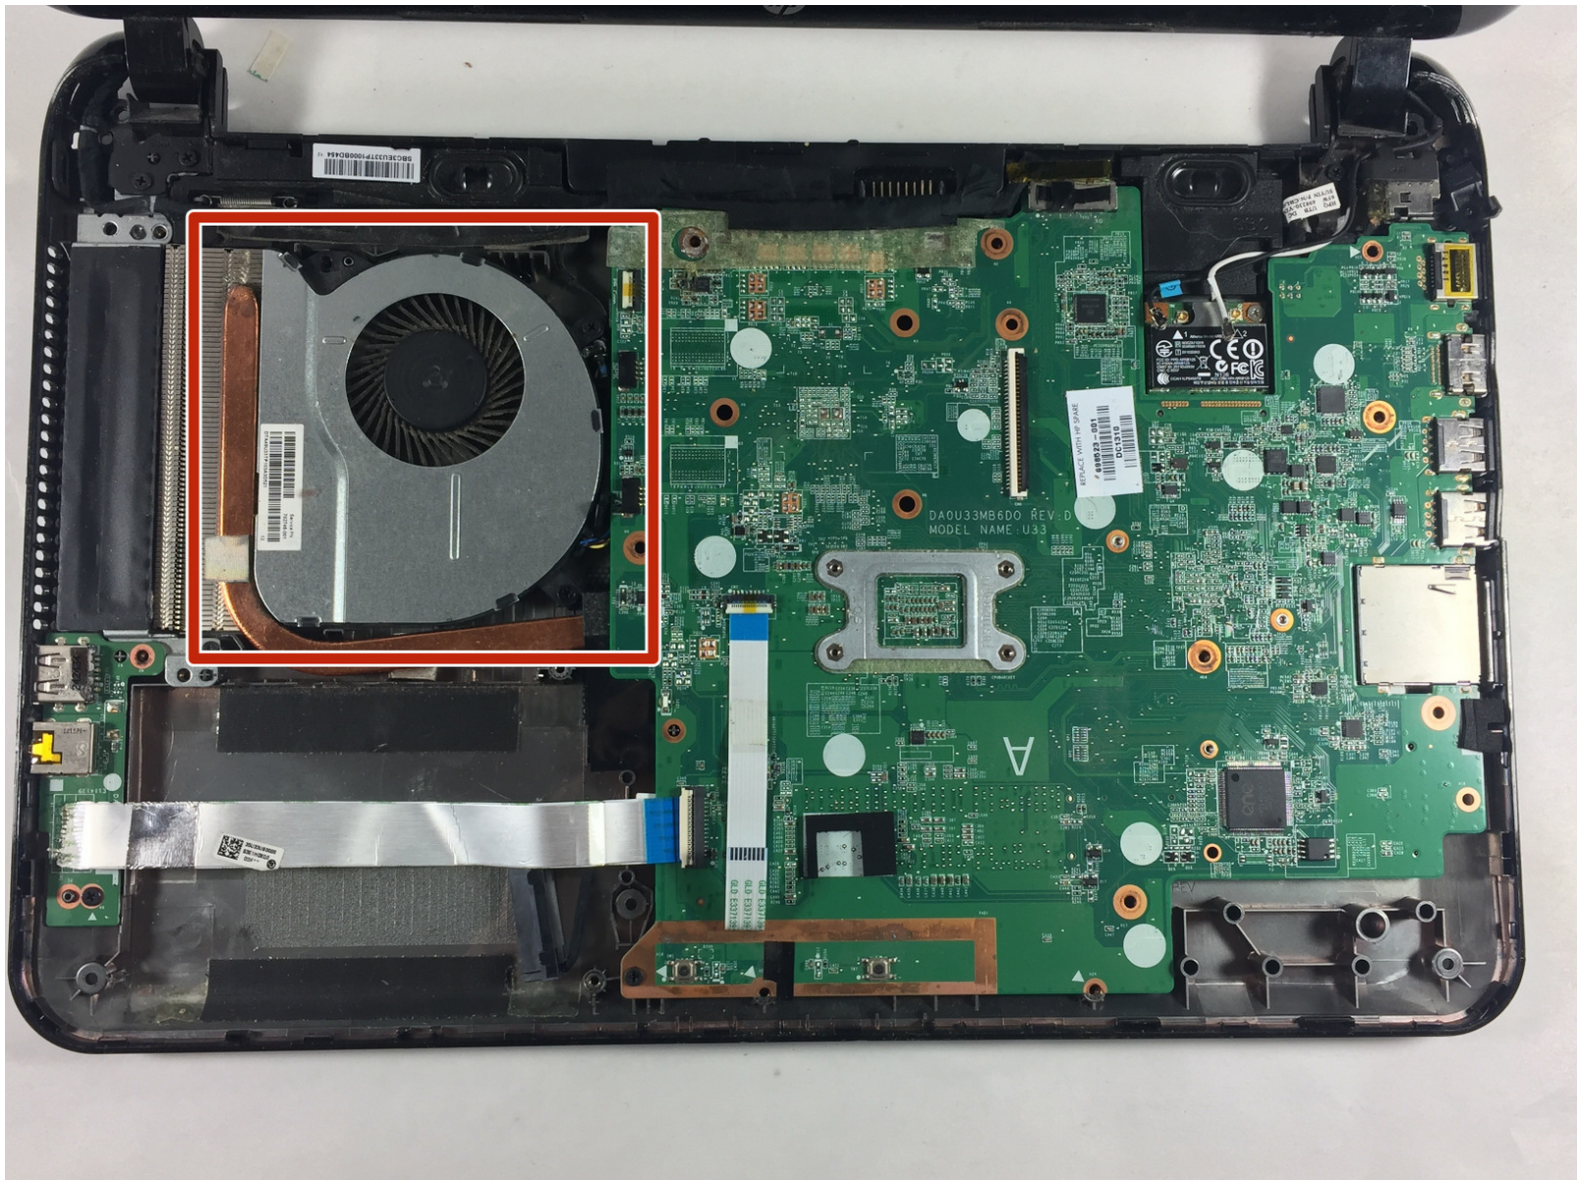

INTRODUCTION

If you're experiencing frequent overheating, your fan may need replacing. Use this guide to replace your laptop's fan.




TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery




 Power down the laptop and detach the charging cord (failure to do so can result in electrical shock).


Step 2




- Flip the laptop upside down so that the bottom is facing you.
- Push the slide on the right toward the center of the laptop, releasing the battery latch.
- Lift the battery up and away from the laptop.

Step 3 — Keyboard

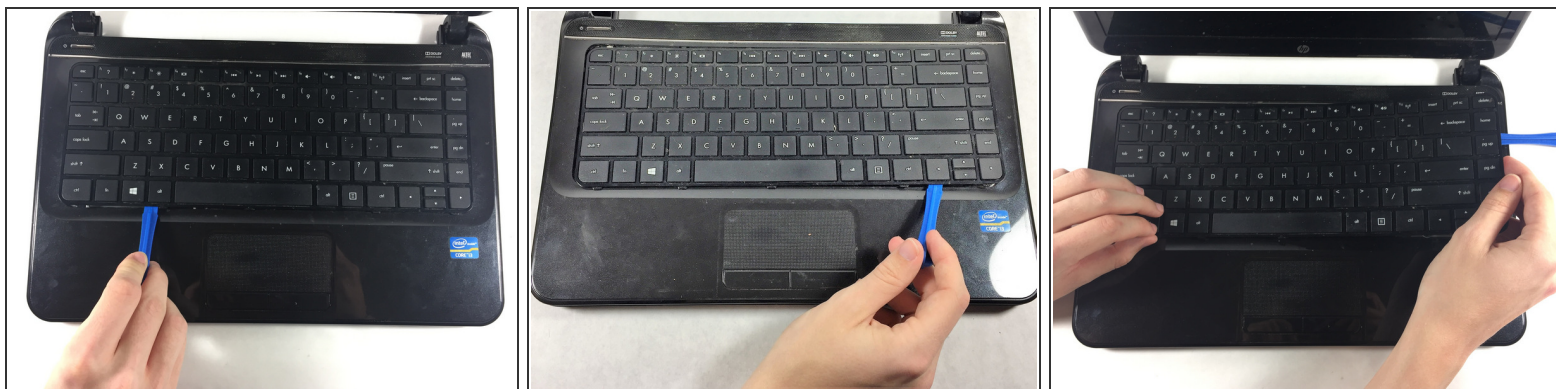



- Insert the plastic opening tool between the keyboard and the palm rest.
 - Pry upwards until the keyboard section detaches from the laptop.
 - Repeat this around the edge of the entire keyboard.
-  Sections will make loud snapping noises as they detach from the palm rest - this is normal.

Step 4

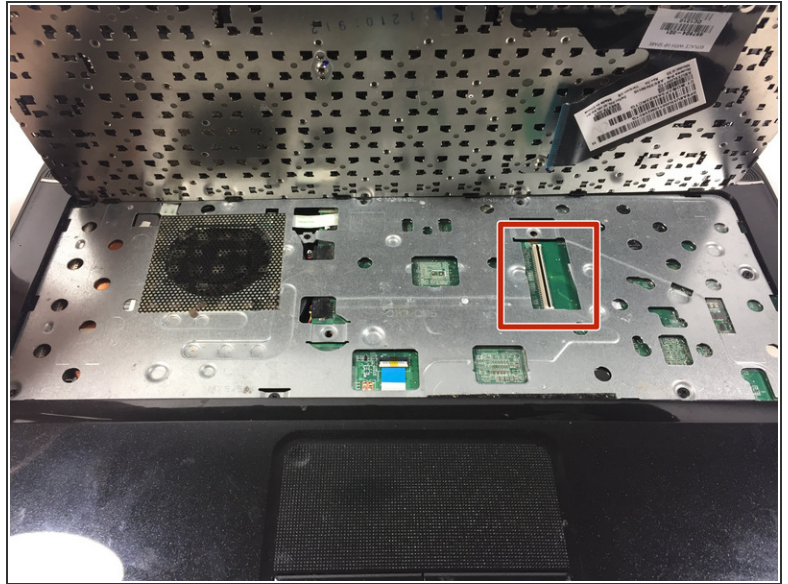

- Lift the keyboard slowly up until the connecting cable is exposed.
- Carefully lift the flap on the ZIF connector using a fingernail or plastic opening tool. This will release the cable.
- Detach the cable.

Step 5 — Palm Rest

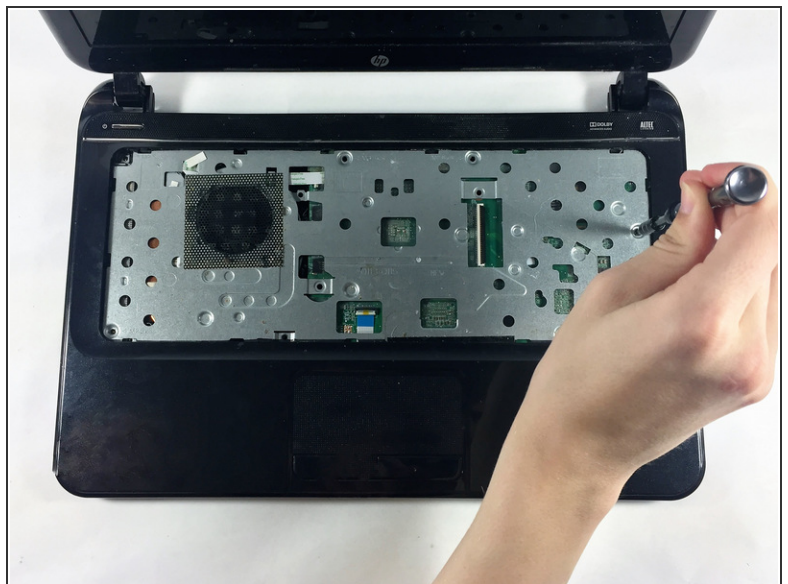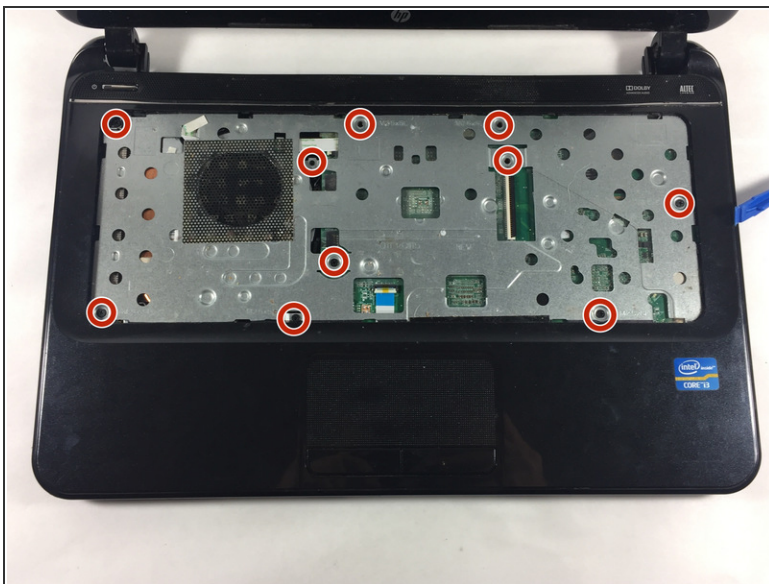

- Unscrew the 10 6.0 mm screws under the keyboard housing with a Philips #0 head screwdriver.

Step 6





- Insert the plastic opening tool into the seam between the palm rest and the laptop.
 - Pry upwards until the palm rest separates from the laptop.
 - Repeat this process around the entire computer.
- i** These steps will be similar to the ones you took to remove the keyboard. Again, you will hear snapping noises.

Step 7




- Lift upwards to remove the palm rest.

Step 8 — CPU Cooling Fan

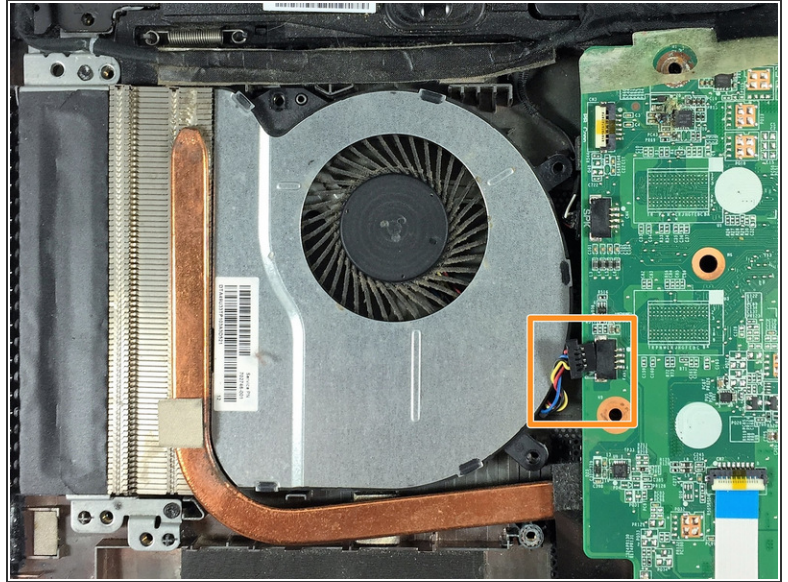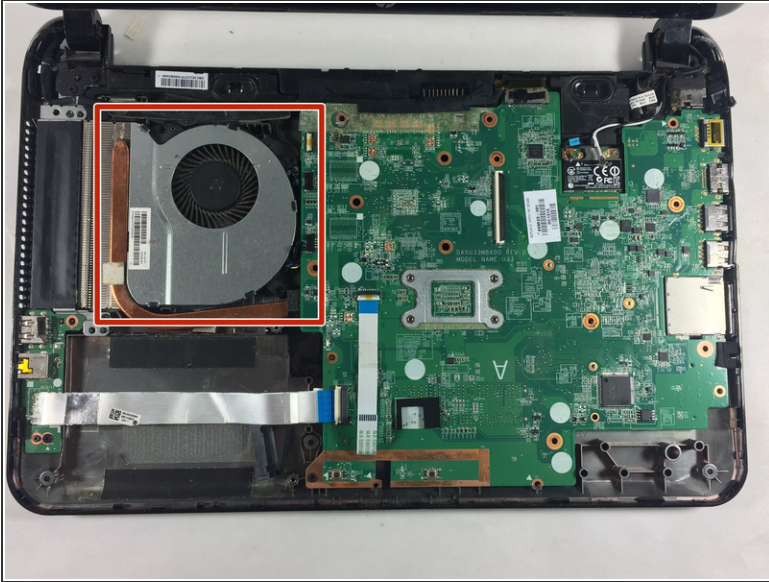


- Locate the fan in the upper left hand corner of the laptop.
 - Remove the cable connecting the fan to the motherboard.
- ⚠ Be sure not to damage the motherboard or the connecting cable. Carefully apply force to remove the cable.

Step 9

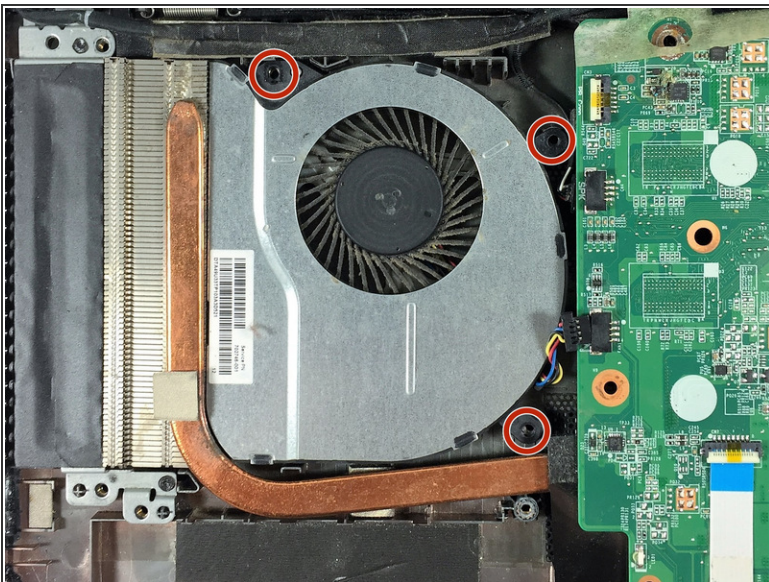

- Unscrew the 3 6.0 mm screws holding the fan with a Phillips #0 head screwdriver.

Step 10

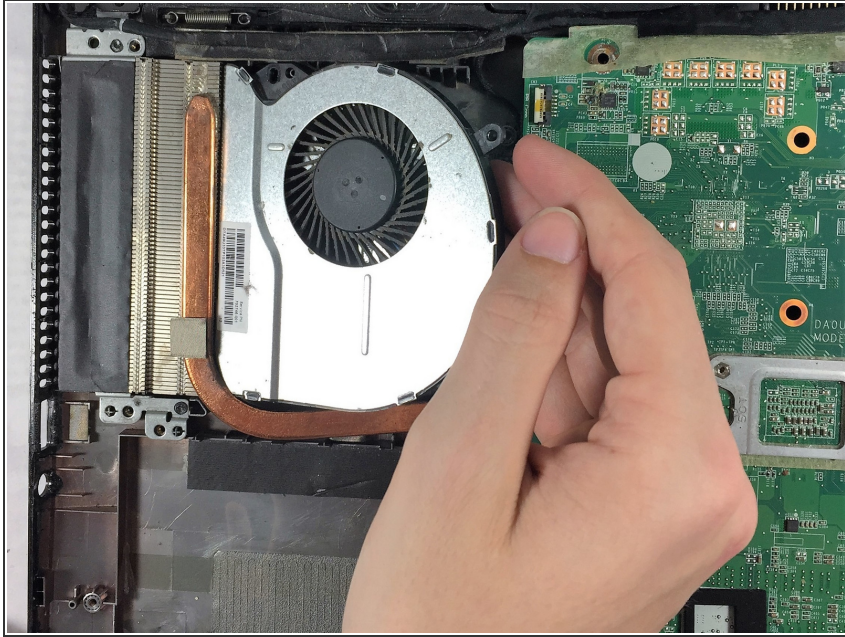

- Remove the fan by pulling upward and to the right.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-09-29 07:53:47 PM.